



Unpacking


Please make sure the package contains the following items:

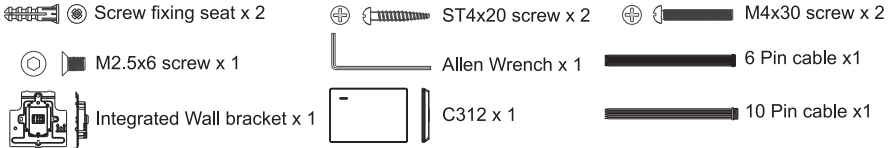


Product Overview

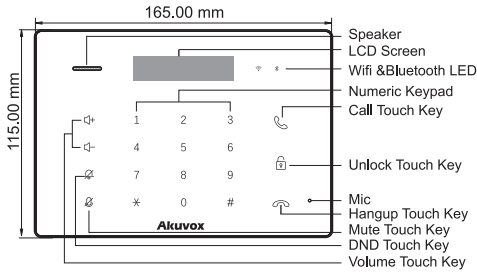


C312A Front Panel

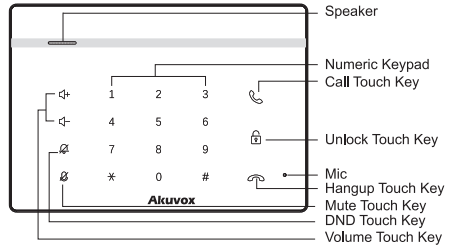


C312S Front Panel

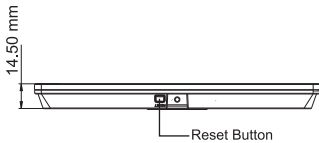


C312X Bottom

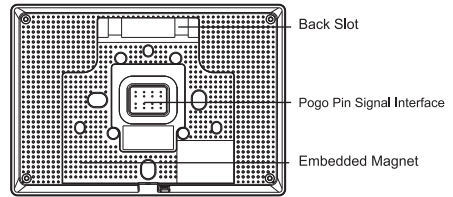

C312X Rear Panel

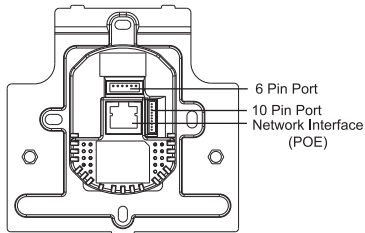

Front Bracket

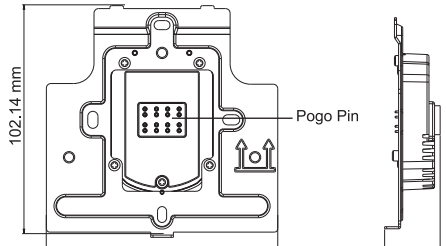


Rear Bracket


Installation

Step 1: Integrated Wall Bracket Installation


Without embedded junction box in the wall.

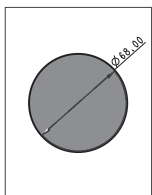


According to the position of the cable, cut a circular hole in the wall of the diameter of 68 mm and depth of 50 mm that can accommodate and through out all necessary cables.

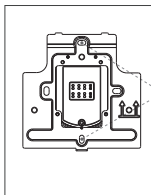


Place the integrated wall bracket in the cut hole and adjust to the horizontal position. Mark the upper and lower screw holes as the pic shown above.

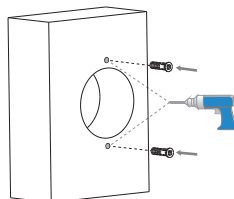


Remove the integrated wall bracket and use the 5 mm drill to drill 2 screw holes with a depth of 25 mm at the marked position, then insert the 2 screw fixing seats provided.

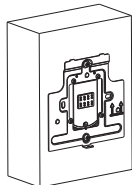

Finish the bracket installation.

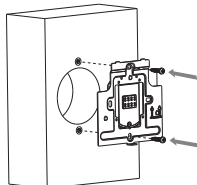


Fix the integrated wall bracket on the wall with two ST4x20 screws.

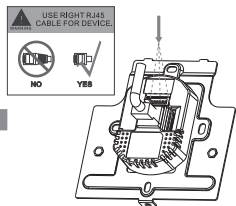


Connect the cables to corresponding ports of integrated wall bracket.

With embedded one-gang junction box (86x86mm or 2x3 inches in size) in the wall.

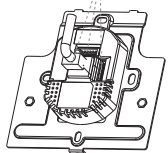


Connect the cables in embedded box to corresponding ports of integrated wall bracket.

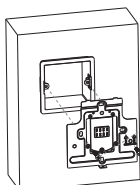


With 86x86mm junction box

Fix the integrated wall bracket to the junction box with two M4x30 screws.

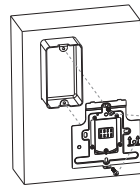

With 2x3 inches junction box





Fix the integrated wall bracket to the junction box with two M4x20 screws.

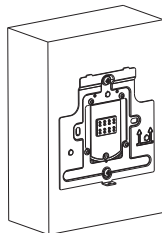


Finish the bracket installation.

C312X Quick Guide


Step 2: Device Installation

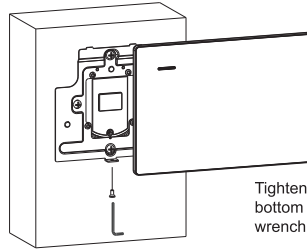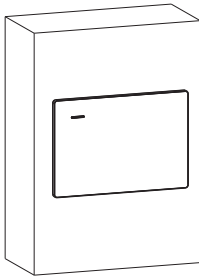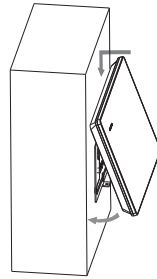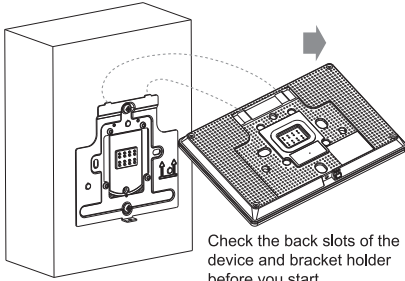

Device Wiring

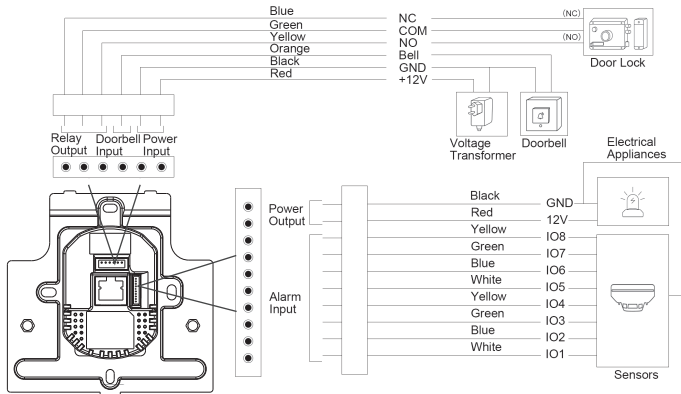





Configuration

1. Access IP address: After setting up network and power, hold the Hangup Touch Key  about 5 s, it will announce IP address automatically, press again to stop.
2. Access the Website: Launch a browser and type in the IP address then enter the username and password to login. (username/password: admin /admin by default)
3. Account Registration: On web UI, go to the path: **Account -> Basic** page to fill in the account information, click Submit to confirm. (Please refer to user manual for more information)

Operation

Make a call:

Enter the callee's number, then press Call Touch Key  to call. Or directly press the Call Touch Key  to call out the predefined Short Press Number. Or hold the Call Touch Key  about 2 s to call out the predefined Long Press Number. Press Hangup Touch Key  to hang up.

(Note: The short/long press number need to be setup in the web in advance.)

Receive a call:

Press flashing Call Touch Key  to pickup the incoming call.

Unlock:

Press Unlock Touch Key  to unlock the local door.

DND And Mute:

Press DND Touch Key  to reject the call. And press mute Touch Key  to mute the mic.

Notice Information

Akuvox C312X firmware contains third-party open source software under the terms of the GNU General Public License (GPL). Akuvox is committed to meeting the requirements of the GNU General Public License (GPL) and will make all required source code available.

The source code of software under the terms of GNU GPL can be downloaded online: <http://www.akuvox.com/gpl>.

Information contained in this document is believed to be accurate and reliable at the time of printing. This document is subject to change without notice, any update to this document can be viewed on Akuvox' s website: <http://www.akuvox.com> © Copyright 2019 Akuvox Ltd. All rights reserved.



AKUVOX (XIAMEN) NETWORKS CO., LTD.

ADD: 10/F, NO.56 GUANRI ROAD, SOFTWARE PARK II, XIAMEN 361009, CHINA
www.akuvox.com



YS31200001