



# Akuvox X912 Rain Cover

## Quick Guide


### On-wall Installation

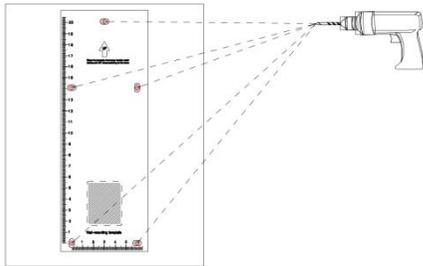


Stick the wall-mounting template onto the wall according to your need. Then use an electric drill with a 6mm diameter bit to make five holes with 20mm depth according to the hole of wall-mounting template.

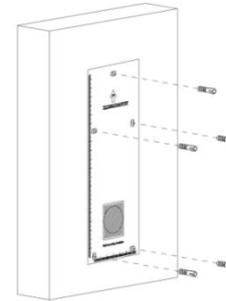

Insert five plastic wall anchors into the holes.

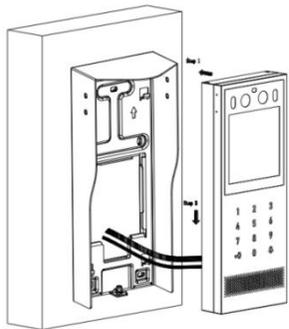


Install the device on the wall-mounting bracket. Line up the slots on the back cover with the four hanging hooks on the bracket. Then hang the device onto hooks while pressing down the device. You will hear a clattering sound if the installation is done, and the device can not move. If the device cannot be easily hung onto the bracket, loosen the five ST4x20 crosshead screws, and move up the rain cover a little bit to increase space between the top of the rain cover and the bracket. Then retighten the five screws before installing the device.

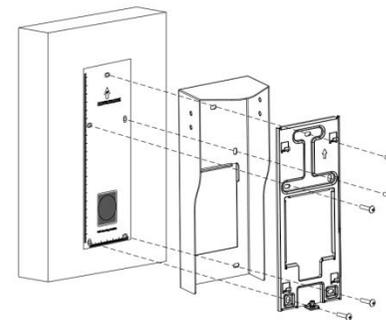

Put the wall-mounting bracket into the rain cover, and please align the bracket's screw holes with the screw holes of rain cover. Then tighten the combined wall-mounting bracket and rain cover on the wall with five ST4x20 crosshead screws.




# Akuvox X912 Rain Cover

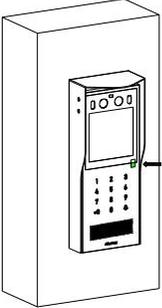

Installation is completed, please remove the protective film.


# Akuvox X912 Rain Cover

## In-wall Installation

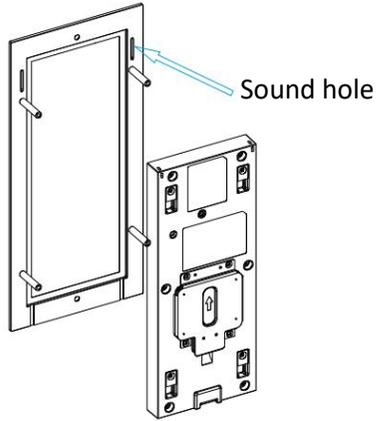


Combine the device with the flush-mounting bracket according to the direction indicated in the figure.

Note: The sound hole of flush-mounting bracket should be upper, and sound hole and arrow of wiring cover should be in the same direction.

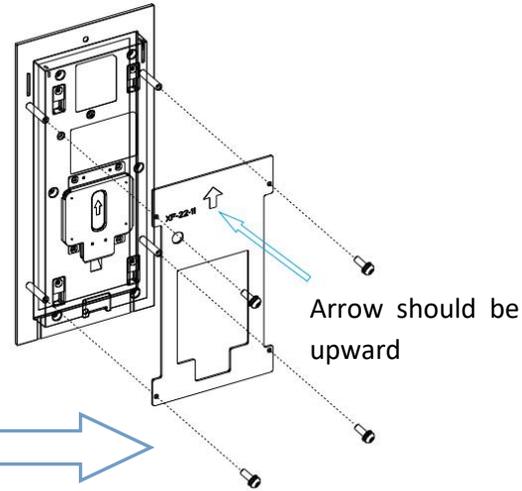


Align the fixing hole of flush-mounting plate with the bolts of flush-mounting bracket, then insert flush-mounting plate onto the flush-mounting bracket. Use four M3x8 crosshead screws to fix flush-mounting plate.

Note: The direction of plate's arrow should be upward and the same as wiring cover's arrow.

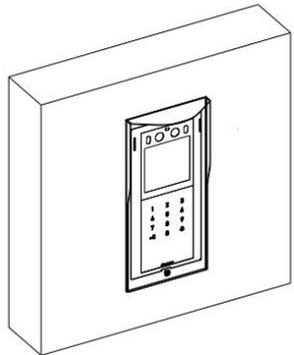

Check if the gap surrounding the device is even and securely installed. Make sure to reserve a gap and power on the device to check the device is normal. Installation is completed.

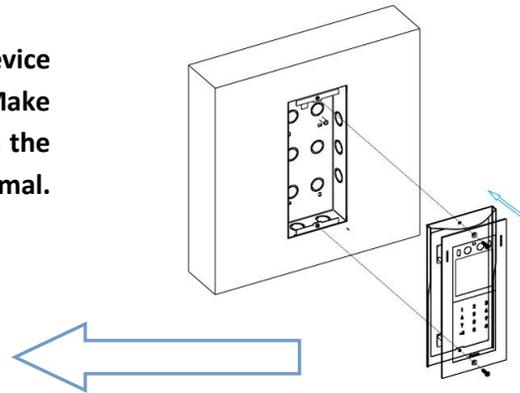

Combine the flush-mounting bracket and flush-mounting rain cover. Then align the fixing holes of flush-mounting bracket with the fixing holes of flush-mounting box, and use torx wrench to tighten flush-mounting plate with two M4x16 torx head screws.

Note: The cover of rain cover should be upper.